

Extended Testing for Packaged-Products 150 lb (68 kg) or Less



ISTA 1 Series
NonSimulation
Integrity
Performance
Test
Procedure

ISTA, Distributing Confidence, Worldwide™

ISTA 1 Series are the most basic category of performance tests.

- They challenge the capability of the package and product to withstand transport hazards, but
- They are not simulations of actual transport hazards, and
- Do not necessarily comply with carrier packaging regulations.

When properly applied, ISTA procedures will provide tangible benefits of:

- Shortened packaged development time and confidence in product launch
- Protection of products and profits with reduced damage and product loss
- Economically balanced distribution costs
- Customer satisfaction and continued business.

VERSION
DATE
Last
TECHNICAL
Change:
MARCH

2014

Last

There are three sections: Overview, Testing and Report

- Overview provides the general knowledge required before going into the testing laboratory and
- Testing presents the specific instructions to do the testing in the laboratory and
- Report indicates what data shall be recorded to submit a test report to ISTA.

Two systems of weights and measures are presented in ISTA test procedures. They are the English system (Inch-Pound) and the international system SI (Metric). Inch-Pound units are shown first with Metric units in brackets, except in some tables where they are shown separately.

- Either system may be used as the unit of measure (standard units), but
- The standard units chosen shall be used consistently throughout the procedure.
- Units are converted to two significant figures and
- Not exact equivalents.

EDITORIAL Change: JANUARY 2017

VERY IMPORTANT:

The entire document shall be read and understood before proceeding with a test.

OVERVIEW OF PROCEDURE 1C

Test Procedure 1C is an integrity test for individual packaged-products.

- It can be used to evaluate the performance of a packaged-product.
- It can be used to compare relative performance of package and product design alternatives.
- The package and product are considered together and not separately.
- Some conditions of transit, such as moisture, pressure or unusual handling, may not be covered.

Other ISTA Procedures may be appropriate for different conditions or to meet different objectives.

Refer to Guidelines for Selecting and Using ISTA Procedures and Projects for additional information.

For complete listing of Procedure Changes and Version Dates

www.ista.org

Preface

go to

OVERVIEW OF PROCEDURE 1C

Scope

Test Procedure 1C covers testing of individual packaged-products weighing 150 lb (68 kg) or less when prepared for shipment.

EXCEPTION:

Individual packaged-products on a visible skid or pallet and that weigh more than 100 lb (45 kg) may be tested according to Test Procedure 1E or Procedure 3E.

Product Damage
Tolerance and
Package
Degradation
Allowance

The shipper shall determine the following prior to testing:

- what constitutes damage to the product and
- what damage tolerance level is allowable, if any, and
- the correct methodology to determine product condition at the conclusion of the test and
- the acceptable package condition at the conclusion of the test.

For additional information on this determination process refer to Guidelines for Selecting and Using ISTA Procedures and Projects.

Samples

Samples should be the untested actual package and product, but if one or both are not available, the substitutes shall be as identical as possible to actual items.

Number of samples required:

One sample is required for the tests in this procedure.

Replicate Testing Recommended:

To permit an adequate determination of representative performance of the packaged-product, ISTA:

- Requires the procedure to be performed one time, but
- Recommends performing the procedure five or more times using new samples with each test.

NOTE:

Packages that have already been subjected to the rigors of transportation cannot be assumed to represent standard conditions. In order to insure testing in perfect condition, products and packages shipped to certified laboratories for testing must be:

- over-packaged for shipment to the laboratory or
- repackaged in new packaging at the laboratory.

Test Sequence

The tests shall be performed on each test sample in the sequence indicated in the following table:

Sequence #	Test Category	Test Type	Test Level	For ISTA Certification
1	Atmospheric Preconditioning	Temperature and Humidity	Ambient	Required
2	Compression Conditioning	Machine or Static	Calculated Test Load or Force	Required
3	Vibration (Alternative methods allowed	Fixed Displacement	1 in (25mm) peak to peak at a frequency to be determined	Required
	– select one test type)	Random	Overall G _{rms} level of 1.15	Required
4	Shock (Alternative methods allowed	Drop	Height varies with packaged- product weight	Required
	– select one test type)	Incline Impact (Conbur)	Impact Velocity varies with packaged-product weight	
		Horizontal Impact	Impact Velocity varies with packaged-product weight	

0

Equipment Required Compression Conditioning

EQUIPMENT REQUIRED FOR PROCEDURE 1C

The following alternatives are acceptable for the equipment required for the Compression Conditioning:

Type of Compression Test	Equipment	In compliance with the apparatus section of
Apply and Release Test Compression test system		ASTM D 642
Apply and Hold Test	Compression test system	Fixed or Floating platen acceptable
Apply and Hold Test	Weight and load spreader	NA

Equipment Required Vibration

The following alternatives are acceptable for the equipment required for the Vibration Test:

Fixed Displacement Vibration Test:

- Vibration Test System with a 1 in (25 mm) fixed or controlled displacement complying with Method A1 or A2 of the apparatus section of ASTM D 999.
 - Rotary or vertical linear motion of the platform is acceptable.
- Metal shim 0.06 in (1.5 mm), thick approximately 2 in (50 mm) wide and at a convenient length.
- Tachometer or suitable indicator for determining vibration frequency in cycles per second (Hz) or cycles per minute (CPM).
- Automatic timer or stopwatch.

Random Vibration Test:

Random Vibration Test System complying with the apparatus section of ASTM D 4728.

Equipment Required Shock

The following alternatives are acceptable for the equipment required for the Shock Test:

Type of Shock Test	Equipment	In compliance with the apparatus section of
Drop Test	Free fall drop tester	ASTM D 5276
Vertical Shock Test	Shock test machine	ASTM D 5487
Alternative Incline Test Incline impact tester (conbur)		ASTM D 880
Alternative Horizontal Test	Horizontal impact test system	ASTM D 4003

Identification of Faces, Edges and Corners

BEFORE YOU BEGIN PROCEDURE 1C

Prior to beginning the tests identify the faces, edges and corners according to the procedure below.

Step	Action
1	Place the packaged-product in its intended shipping position as determined by shipper. If the shipping position can be variable, place the packaged-product so that the primary shipping label location is on the top face.
2	Does the packaged-product have only six faces (2 sides, 2 ends, top and bottom)?
	If Yes, then go to Step 5. The state of the sta
	If No, continue to next Step.
3	Develop a method to identify each face, edge and corner and document with a diagram.
4	Go to next page for further Before You Begin details.
5	Is the package a corrugated container?
	If Yes, continue to next Step. If No, then go to Step ?
6	If No , then go to Step 8. Does the package have a manufacturar's joint connecting a side and an and face?
0	Does the package have a manufacturer's joint connecting a side and an end face? • If Yes , continue to next Step.
	If No , then go to Step 8.
7	Turn the packaged-product so that you are looking directly at a face with the manufacturer's joint on the observer's right and go to Step 9.
8	Position one of the smallest width faces of the packaged-product directly in front of you.
9	Identify faces according to the diagram below.
	Edge 1-2 Manufacturer's Joint Corner 2-3-5
10	Identify edges using the numbers of the two faces forming that edge. Example: Edge 1-2 is the edge formed by face 1 and face 2 of the packaged-product.
11	Identify corners using the numbers of the three faces that meet to form that corner. Example: Corner 2-3-5 is the corner formed by face 2, face 3, and face 5 of the packaged-product.
12	Go to next page for further Before You Begin details.

Weight and Size Measurement

Before You Begin Atmospheric Conditioning

Before You Begin Compression Conditioning

BEFORE YOU BEGIN PROCEDURE 1C

You shall know the packaged-product's:

- gross weight in pounds (kg), and
- outside dimensions of Length, Width and Height (L x W x H) in inches (mm or m)

Required Preconditioning:

The packaged-product shall be preconditioned to laboratory ambient temperature and humidity for twelve (12) hours prior to testing.

CAUTION

When using weights and a load spreader, use extreme care to prevent injury.

NOTE:

This is only a conditioning requirement before the vibration and impact tests begin:

- it is not a compression performance test or
- a predictor of warehouse or vehicle stacking capability.
- there is a minimum test force or load **and** a maximum test force or load.

Familiarity with the following formulas is required

Familiarity with the following formulas is required:							
Compression ⁻	Compression Test System		English Units - Pounds Force (lbf)	f) Metric Units – Newt		ons (N)	
Apply & Release Test Force AR		[300 + W _t + [3 x (L + W)]] x 1.4	[1300 + (W _t x 9.8) + [530 x (L + W)]] x		W)]] x 1.4		
Apply & Hold Te	est Force	AH	300 + Wt + [3 x (L + W)]	1300 + (V	1300 + (W _t x 9.8) + [530 x (L + W)]		
Weight & Load	Spreader	Test Load	English Units Pounds (lb)	Metric Un	Metric Units Kilograms (kg)		
Dead Weight Te	est Load	DW-AH	300 + W _t + [3 x (L + W)]	135 + W _t	+ [54 x (L +	- W)]	
Where							
Wt	Total weigh	nt of the packa	aged-product	Pounds		Kilograms	
	Type of Te	st		Min.	Max.	Min.	Max
AR	Apply a	Apply and Release test force		420 lbf	1050 lbf	1870 N	4670 N
AH	Apply a	ind Hold –Ma	chine test force	300 lbf	750 lbf	1330 N	3340 N
DW-AH	Apply a	Apply and Hold –Dead Weight test load		300 lb	750 lb	135 kg	340 kg
	Formula values, force			3		530	
	Formula va	Formula values, load		3		54	
L	Overall cor	Overall container length		Inches		Meters	
W	Overall cor	Overall container width		Inches		Meters	
	Compensating Factor for time of compression		r time of compression	1.4		1.4	
	Metric con	Metric conversion factor		NA		9.8	

Continued on next page

Before You Begin Compression Conditioning Continued

BEFORE YOU BEGIN PROCEDURE 1C

Continued from previous page

Determine the test force or load to be used in the Compression Conditioning Block from the following table

Step	Action					
2	Is the package height over 60 in (1.5 m)? If Yes, then use the appropriate minimum values only from the previous table as the test force or load. If No, then continue with the next step. Determine the maximum test force or load to be used by performing the appropriate action as indicated					
	below: IF the calculated test force or load from the previous table is	Then use				
	Equal to or less than 420 lbf (1870 N) for AR or Equal to or less than 300 lbf (1330 N) for AH or Equal to or less than 300 lb (135 kg) for DW-AH	the appropriate minimum values from the previous table as the test force or load.				
	More than 420 lbf (1870 N) but less than 1050 lbf (4670 N) for AR or More than 300 lbf (1330 N) but less than 750 lbf (3340 N) for AH or More than 300 lb (135 kg) but less than	the appropriate test force or load calculated from the previous table as the test force or load.				
	750 lb (340 kg) for DW-AH Equal to or greater than 1050 lbf (4670 N) for AR or Equal to or greater than 750 lbf (3340 N) for AH or Equal to or greater than 750 lb (340 kg) for DW-AH	the appropriate maximum values from the previous table as the test force or load.				

BEFORE YOU BEGIN PROCEDURE 1C

Before You Begin Vibration Testing

CAUTION:

A restraining device or devices shall be used with the vibration test system to:

- Prevent the test specimen from moving off the platform and
- Maintain test orientation of the packaged-product, but
- The device or devices shall not restrict the vertical motion of the test specimen during the test.

For Fixed Displacement Vibration:

Familiarity with the following formula is required to calculate the test duration after the frequency required to bounce the packaged-product is determined in the Vibration Test Block:


The chart below shows **example** Test Durations calculated for several frequencies.

СРМ	Hz	Test Duration in Minutes
150	2.5	95
180	3.0	79
210	3.5	68
240	4.0	60
270	4.5	53
300	5.0	48

For Random Vibration:

The following breakpoints shall be programmed into the vibration controller to produce the acceleration versus frequency profile (spectrum) below with an overall G_{rms} level of 1.15. The theoretical stroke required to run this vibration profile is 22.45 mm (0.884 in) peak to peak.

Frequency (Hz)	PSD Level, g ² /Hz
1.0	0.0001
4.0	0.01
100.0	0.01
200.0	0.001

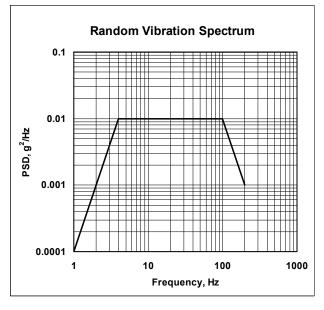

Before You Begin Shock Testing

BEFORE YOU BEGIN PROCEDURE 1C

The test drop height varies with the weight of the packaged-product. Find the weight of the packaged-product in the following chart to determine a drop height or an equivalent impact velocity or velocity change to be used for a substituted drop:

Packaged-Product Weight			Drop l	Height	Impact '	Velocity	
Equal to or	Equal to or greater than But Less than		Free Fall		Incline or Horizontal		
lb	kg	lb	kg	in.	mm	ft/s	m/s
0	0	21	10	30	760	13	3.9
21	10	41	19	24	610	11	3.5
41	19	61	28	18	460	10	3.0
61	28	100	45	12	310	8.0	2.5
100	45	150	68	8	200	6.6	2.0

- The test method requires the packaged-product to be dropped in several different package orientations.
- A drop test must be performed in all required orientations where dropping the packaged-product is practical.
- If dropping in a required orientation is not practical an equivalent incline or horizontal test can be substituted for that orientation.
- When using impact velocity or velocity change, if any velocity in a Test Sequence is below the required minimum level, that sequence event must be repeated until the test velocity meets the minimum.

TEST SEQUENCE FOR PROCEDURE 10

The test blocks that follow contain tables that indicate the required steps for each test in the procedure.

TEST BLOCK 1
Atmospheric
Conditioning
O

TEMPERATURE AND HUMIDITY				
Step	Action			
1	PRE-CONDITIONING: The packaged-product should be stored at laboratory ambient temperature and			
_	humidity for twelve (12) hours prior to testing.			
2	Record the ambient laboratory temperature and humidity when testing starts.			
3	At the end of testing record temperature and humidity.			
4	Go to TEST BLOCK 2 (Compression).			

TEST BLOCK 2 Compression Conditioning

COMPRESSION					
Step	Action				
1	Testing is to be conducted using the test load from Before You Begin Compression Conditioning and be performing the appropriate action as indicated in the table below:				
	IF the testing equipment to be used is a THEN				
	Compression Test System	Step 2.			
	Weight and load spreader	Step 7.			
2	Center the packaged-product with face-3 resting	g on the lower platen of the compression tester.			
3	Start the test machine and bring the platens tog	ether at the rate of one-half (0.5) in (13 mm) per minute.			
4	Perform the appropriate action as indicated in the	ne table below:			
	IF the compression test is a THEN				
value determined		Increase the force until it reaches the AR Test Force value determined in Before You Begin Compression Conditioning. Then go to Step 5.			
	Apply and Hold Test	Increase the force until it reaches the AH Test Force value determined in Before You Begin Compression Conditioning. Then go to Step 6.			
5	Release the force. Compression Conditioning is	complete. Go to TEST BLOCK 3 (Vibration).			
6	Maintain the force for one (1) hour, and then rel	ease the force. Go to TEST BLOCK 3 (Vibration).			
7	Place the packaged-product with face-3 resting on a smooth, flat, rigid surface.				
8	Place a rigid load spreader that is larger than the top face of the test specimen on the packaged-product.				
9	Apply the necessary weight to bring the total of the load spreader and weights up to the DW-AH Test Load determined in Before You Begin Compression Conditioning and maintain for one (1) hour.				
10	Remove the weight and load spreader.				
11	Compression Conditioning is complete. Go to T	EST BLOCK 3 (Vibration).			

TEST BLOCK 3 Vibration (Fixed Displacement)

TEST SEQUENCE FOR PROCEDURE 1C

VIBRATION - FIXED DISPLACEMENT					
Step		Action			
1	Determine if testing is going to be Fixed Displacement or Random Vibration.				
	IF Vibration testing is going to be	THEN go to			
	Fixed Displacement	Step 2.			
	Random	TEST BLOCK 4 (Vibration – Random)			
2	Put the packaged-product on the vibration table	so that face-3 rests on the platform.			
3	Start the vibration system to vibrate at 1 in (25 n frequency.	nm) total displacement at the machine's lowest			
4	Maintain a fixed displacement at 1 in (25 mm) a table until the packaged-product begins to mom	nd slowly increase the frequency (speed) of the vibration entarily leave the surface of the platform.			
5	Can a metal shim be intermittently moved between product and the surface of the platform?	een the bottom of the longest dimension of the packaged-			
	If Yes, hold that frequency and then conting	nue to the next Step (Step 6).			
	• If No , then slowly increase the frequency until the requirement of this Step (Step 5) is met, and hold that vibration frequency.				
6	Determine the test duration in minutes using the formula indicated in Before You Begin Vibration Testing and the CPM or Hz frequency identified in Step 5.				
7	Begin timing the vibration test duration.				
8	Stop the vibration test after completion of one-half $(1/2)$ of the total minutes of test duration. Invert the packaged-product so that face-1 rests on the platform.				
9	Re-start the vibration system to vibrate at 1.0 in (25 mm) total displacement at the machine's lowest frequency.				
10	Maintain a fixed displacement at 1 inch (25 mm) and slowly increase the frequency (speed) of the vibration table until the packaged-product begins to momentarily leave the surface of the platform.				
11	Can a metal shim be intermittently moved between the bottom of the longest dimension of the packaged-product and the surface of the platform?				
	If Yes, hold that frequency and then continue	ue to the next step (Step 12).			
	If No , then slowly increase the frequency hold that vibration frequency.	until the requirement of this Step (Step 11) is met, and			
12	Resume timing the test duration.				
13	Stop the vibration test after completion of one-packaged-product so that either face-2 or 4 rest	sixth $(1/6)$ of the total minutes of test duration. Place the s on the platform.			

Continued on next page

TEST BLOCK 3 CONTINUED Vibration (Fixed Displacement)

TEST SEQUENCE FOR PROCEDURE 1C

Continued from previous page

Step	Action				
14	Re-start the vibration system to vibrate at 1.0 in (25 mm) total displacement at the machine's lowest frequency.				
15	Maintain a fixed displacement at 1 inch (25 mm) and slowly increase the frequency (speed) of the vibration table until the packaged-product begins to momentarily leave the surface of the platform.				
16	Can a metal shim be intermittently moved between the bottom of the longest dimension of the packaged-product and the surface of the platform?				
	If Yes, hold that frequency and then continue to the next step (Step 17).				
	• If No , then slowly increase the frequency until the requirement of this Step (Step 16) is met, and hold that vibration frequency.				
17	Resume timing the test duration.				
18	Stop the vibration test after completion of one-sixth (1/6) of the total minutes of test duration. Place the packaged-product so that either face-5 or 6 rests on the platform.				
19	Re-start the vibration system to vibrate at 1.0 in (25 mm) total displacement at the machine's lowest frequency.				
20	Maintain a fixed displacement at 1 inch (25 mm) and slowly increase the frequency (speed) of the vibration table until the packaged-product begins to momentarily leave the surface of the platform.				
21	Can a metal shim be intermittently moved between the bottom of the longest dimension of the packaged-product and the surface of the platform?				
	If Yes, hold that frequency and then continue to the next step (Step 22).				
	• If No , then slowly increase the frequency until the requirement of this Step (Step 21) is met, and hold that vibration frequency.				
22	Resume timing the test duration.				
23	Stop the vibration testing after completion of one-sixth (1/6) of the total minutes of test duration.				
24	Vibration testing is now complete. Go to TEST BLOCK 5 (Shock)				

TEST BLOCK 4 Vibration (Random)

VIBRATION - RANDOM					
Step	Action				
1	Put the packaged-product on the vibration table so that face-3 rests on the platform.				
2	Start the vibration system to produce the random vibration spectrum indicated in Before You Begin Vibration Testing.				
3	Stop the vibration system after the completion of 30 minutes. Invert the packaged-product so that face-1 (top) rests on the platform.				
4	Begin the vibration duration for this orientation.				
5	Stop the vibration system after the completion of 10 minutes. Place the packaged-product so that either face-2 or 4 rests on the platform.				
6	Begin the vibration duration for this orientation.				
7	Stop the vibration system after the completion of 10 minutes. Place the packaged-product so that eithe face-5 or 6 rests on the platform.				
8	Begin the vibration duration for this orientation.				
9	Stop the vibration testing at the end of 10 minutes.				
10	Vibration testing is now complete. Go to TEST BLOCK 5 (Shock).				

TEST BLOCK 5 Shock

TEST SEQUENCE FOR PROCEDURE 1C

SHOCK - DROP					
Step	Action				
1	Determine the method(s) of test and the required drop height or impact velocity in Before You Begin Shock Testing.				
2	Do you have a packaged-product with only 6 faces as identified in Face, Edge and Corner Identification? • If Yes , continue with the next Step. • If No , then go to Step 6.				
3	Test the packaged-product according to the method(s) and level(s) determined in Step 1. Follow the sequence in the table below.				
4	Sequence #	Orientation	Specific face, edge or corner		
	1	Corner	most fragile face-3 corner, if not known, test 2-3-5		
	2	Edge	shortest edge radiating from the corner tested		
	3	Edge	next longest edge radiating from the corner tested		
	4	Edge	longest edge radiating from the corner tested		
	5	Face	one of the smallest faces		
	6	Face	opposite small face		
	7	Face	one of the medium faces		
	8	Face	opposite medium face		
	9	Face	one of the largest faces		
	10	Face	opposite large face		
5	All testing is now complete. Go to the Reporting an ISTA Test section at the end of this Procedure.				
6	Select a bottom face corner to replace the corner required in Step 4 Sequence 1 to begin the test.				
7	Identify the edges of the packaged-product that meet the Step 4 Sequence 2 through 4 requirements.				
8	Select any 6 faces to replace the faces required in Step 4 Sequence 5 through 10.				
9	Using the corner, edges and faces from Steps 6 through 8 go to Step 3 and proceed.				
10	All testing is now complete. Go to the Reporting an ISTA Test section at the end of this Procedure.				

Reporting an ISTA Test: Completing and Submitting an ISTA Test Report

REPORTING AN ISTA TEST

ISTA Test Report Forms may be downloaded by members through the online ISTA Member Center (www.ista.org/members/). Custom forms are also acceptable, but information on an official ISTA Report Form is considered to be the minimum required for any test report submission and consideration. Test report forms should be submitted to ISTA Headquarters by mail, fax or electronically. Test reports should be detailed enough for accurate repeatability of the test.

The packaged-product has satisfactorily passed the test if, upon examination, it meets the Product Damage Tolerance and Package Degradation Allowance determined prior to testing.

ISTA Certified Testing Laboratories:

- Should file a test report on all ISTA Test Procedures or Projects conducted.
- Shall file a test report on all ISTA Test Procedures or Projects conducted to obtain Transit Tested Package Certification or Acknowledgement.

To submit a test report form:

- Email to ista@ista.org
- Mail to address shown below
- Fax to +1 517-333-3813.

ISTA Transit Tested Program: Packaged-Product Certification

The ISTA Transit Tested Certification Mark as shown:

- is a registered certification mark and
- can only be printed on certified packages and
- can only be used by license agreement and
- by a Shipper member of the International Safe Transit Association.



When a Shipper member prints this certification mark on a packaged-product, with their manufacturer's license number, they are showing their customer, vendors and carriers that it has passed the requirements of ISTA preshipment testing.

To obtain initial certification of a packaged-product:

- the product manufacturer must be a Shipper member of ISTA in good-standing and with a valid License Agreement on file
- the testing laboratory must be a member of ISTA in good-standing and have a valid lab certification date
- a test report must be submitted by the laboratory to ISTA Headquarters.

In order to maintain its certified status and eligibility for identification with the Transit Tested Certification Mark, each packaged-product must be re-tested whenever a change is made in the:

- Product or
- Process or
- Package.

If corrugated packaging is used, it is recommended that the basis weights of the constituent papers/paperboards be determined after testing and documented to provide the best indicator of equivalence or change.

As a quality control procedure, packaged-products should be re-tested frequently, for example, yearly.

For additional information, refer to Guidelines for Selecting and Using ISTA Test Procedures and Projects.

ISTA Membership information is available at www.ista.org.

This Test Procedure is published by: International Safe Transit Association 1400 Abbot Road, Suite 160, East Lansing, Michigan 48823-1900 USA

© 2017 International Safe Transit Association

No part of the contents of this Test Procedure may be reproduced or transmitted in any form or by any means without the written permission of the publisher.

Order Information: Additional copies of this Test Procedure and the ISTA® RESOURCE BOOK may be ordered online at www.ista.org or by contacting ISTA at (+1) 517.333.3437. A listing of current procedure version dates is available at www.ista.org.

Δ – Most recent technical change(s)